


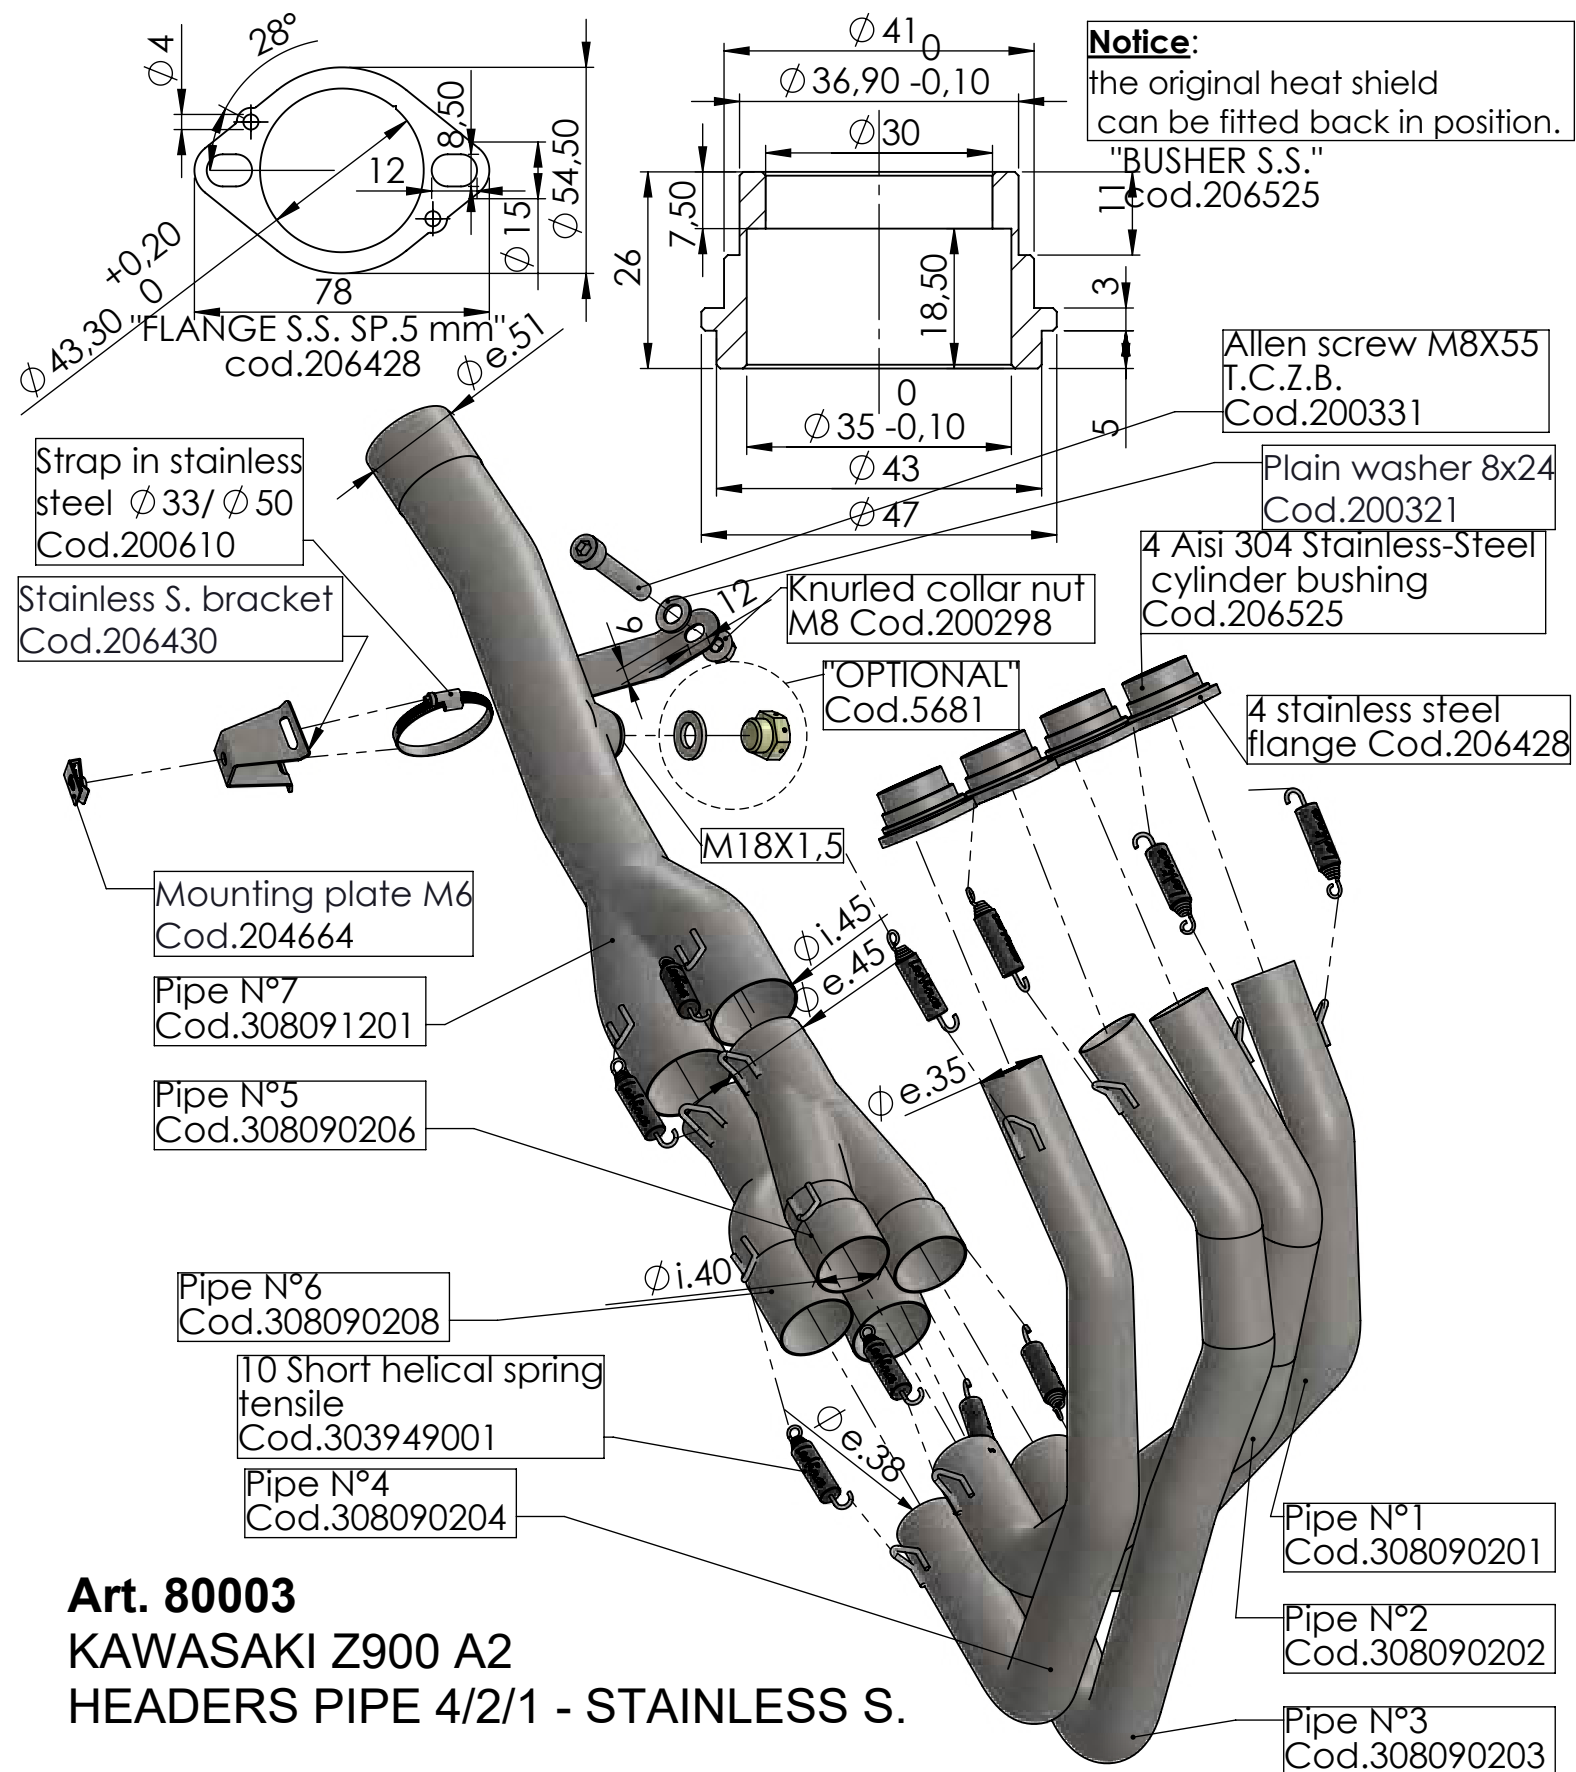

- Disconnect the control cables from the exhaust valve on the actuator side;
by removing the original link pipe with the catalytic converter,
also the valve connected to the link pipe and the cables are removed.
The valve's servo motor should not be removed or disconnected.

WARNING

- Fitting the exhaust system it is advisable to optimize the carburation by remapping
the stock ECU or by adopting an additional ECU unit.
- Après avoir effectué le montage de cet élément, il est conseillé de procéder à un
remapping de l'ECU d'origine ou d'adapter un boîtier additionnel spécifique.