
B	Box: PLOCK 2			FITTING INSTRUCTIONS 1
E	BIKE	SUZUKI GSF 600 BANDIT	PART NO.	ESI - 54
١	YEAR	1995 - 2000	FIT KITS	OVAL Z039.11080 // ROUND Z039.10080
ſ	NOTES	Where not supplied use original fixings	FEATURES	DB KILLER Z038.10120

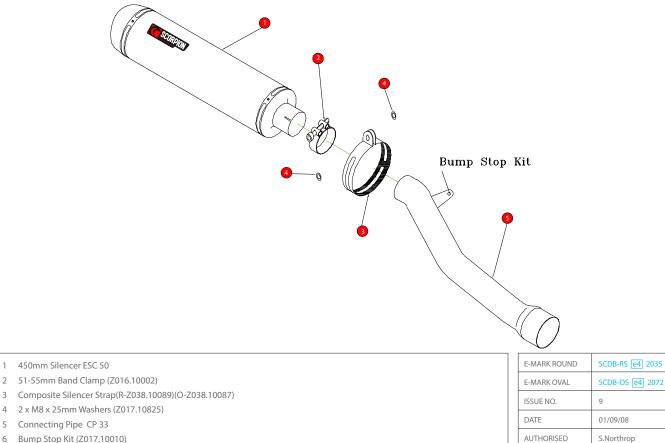

5 Bump Stop Kit (Z017.10010) б

3

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

CHECKED

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

