
| Box: PLOCK 1 | | | FITTING INSTRUCTIONS 1 |
|--------------|----------------|----------|--------------------------|
| BIKE | YAMAHA FZ8 | PART NO. | EYA - 87 |
| YEAR | 2010 - Current | FIT KITS | OVAL Z039.11380 |
| NOTES | | FEATURES | DB KILLER Z038.10120 (B) |

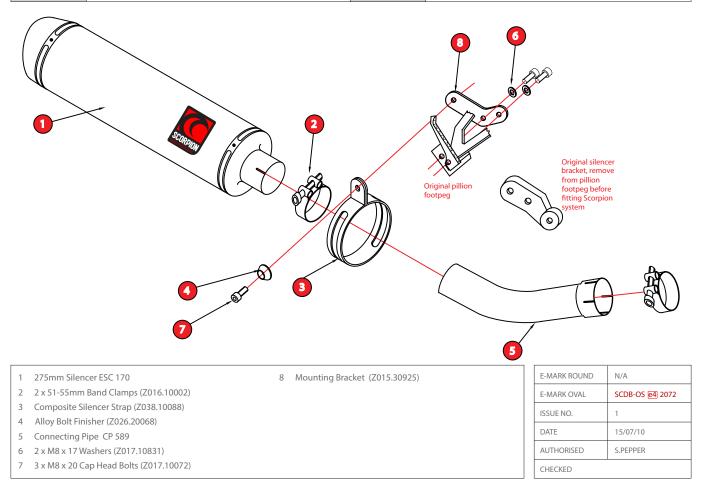

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

