




BIKE	KAWASAKI Z 800	PART NO.	RKA-100
YEAR	2013- On	FIT KITS	Z039.20479
NOTES	Where not supplied use original fittings.	FEATURES	dB Killer - Z038.10043 (Type V)

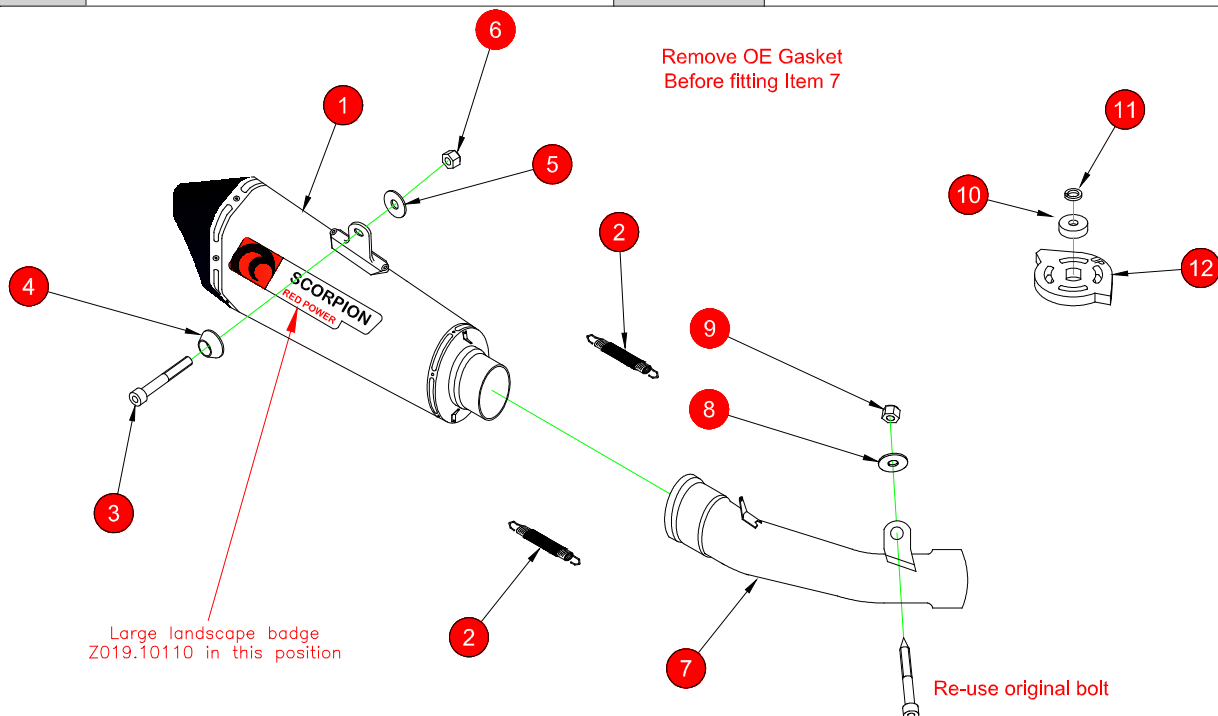

- |  |   |
|--|---|
| 1 RSC-256 RACE Conical Serket Silencer   | 8 M10x25mm Washer (Z017.11014)                |
| 2 2 x Rubber Coated Springs (Z028.10030) | 9 M10x1.25 FINE THREAD Nyloc Nut (Z017.11018) |
| 3 M8x60mm Cap Head Bolt (Z017.10080)     | 10 Aluminium Collar (Z026.20045)              |
| 4 Alloy Bolt Finisher (Z026.20068)       | 11 M6 Split Washer (Z017.10027)               |
| 5 M8x25mm Washer (Z017.10825)            | 12 Replacement Servo Wheel (Z007.10955)       |
| 6 M8 Nyloc Nut (Z017.10062)              |   |
| 7 Connecting Pipe CP710                  |   |

E-MARK	RSC256  2460 
ISSUE NO.	2
DATE	07/11/16
AUTHORISED	S.Jackson
CHECKED	

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Fitting Instructions overleaf:-



BIKE	KAWASAKI Z 800	PART NO.	RKA-100
YEAR	2013 - ON	FIT KITS	Z039.20479
NOTES	Where not supplied use original fittings.	FEATURES	

CONTINUED FROM OVERLEAF:

A



B



A) Remove pillion seat.

B) Remove bracket holding riders seat.

C) Remove riders seat.

D) Remove screw from right hand plastic trim.

C



D



E) Remove top bolt from right hand plastic trim.

F) Slide plastic trim off velcro.

G) Remove servo wheel. DO NOT TURN SHAFT, remove wheel from shaft and spring retainer.

H) Remove heat shield off original exhaust.

E



F



G



H



Box: PLOCK 1

BIKE	KAWASAKI Z 800	PART NO.	RKA-100
YEAR	2013 - ON	FIT KITS	Z039.20479
NOTES	Where not supplied use original fittings.	FEATURES	

CONTINUED FROM OVERLEAF:




I) Remove bolt from bracket.



J) Remove bolt from the clamp.

K) Remove exhaust mounting bolt and nut from pillion foot peg.


L) Carefully remove standard silencer, slowly remove feeding out the cables, PLEASE TAKE CARE.

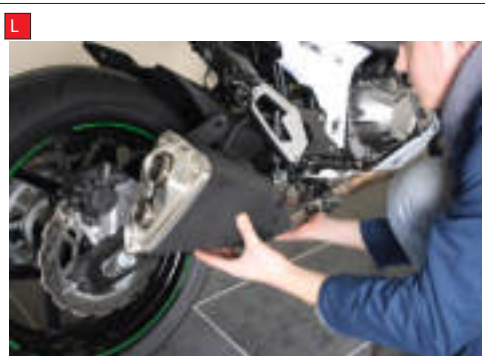

M) Fit Scorpion servo wheel with collar, washer and original bolt, **ensure "UP" is facing you, tighten to 5 ft/lb, DO NOT TURN SHAFT.**

N) Remove original gasket from the standard pipe.

O) Fit Scorpion link pipe, using standard bolt and use the washer and nut provided. Then tighten up the clamp.

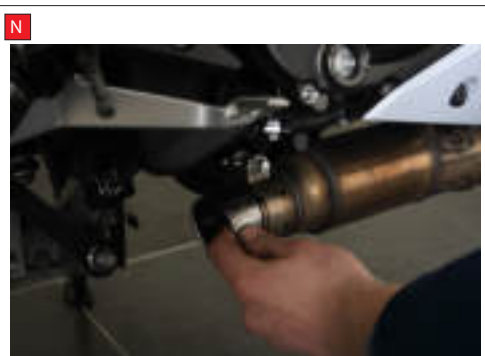

P) Fit Scorpion silencer to the connecting pipe, attach the two springs and using item's 3, 4, 5, and 6 mount the silencer to the pillion foot peg.

Ensure all clamps and bolts are secure, re-fit plastic trim and both seat. Run the bike for 10 minutes, re-check all bolts and clamps are secure.

